



# Timing Belt

## Illustrated Index

### NOTE:

- Refer to page 6-18 ('91-'93) or ('94-'96) for positioning crankshaft and pulley before installing the belt.
- if it is to be reused, mark the direction of rotation on the belt before removing.
- Do not use the middle cover and lower cover for storing removed items.
- Clean the middle cover and lower cover before installing.
- Replace the camshaft seals and crankshaft seals if there is oil leakage.
- Refer to page 6-12 ('91-'93) or ('94-'96) before installing timing belt.

