

CKP/CYP Sensor

Replacement

NOTE: Turn the crankshaft so that the No. 1 piston is at top dead center (see page 6-19 ('91-'93) or ('94-'96))

1. Remove the timing belt (see page 6-15 ('91-'93) or ('94-'96))
2. Remove the front intake end exhaust camshaft pulleys.
3. Remove the back cover.
4. Remove the CKP/CYP sensor from the front cylinder head.
5. Install the CKP/CYP sensor in the reverse order of removal.
 - Refer to page 6-18 ('91-'93) or ('94-'96) and 19 when ('91-'93) or ('94-'96) installing the timing belt.

