



Cylinder Heads


Illustrated Index

CAUTION: To avoid damage, wait until the engine coolant temperature drops below 100°F (38°C) before removing the cylinder head.

NOTE: Use new O-rings and gaskets when reassembling.



Prior to reassembling, clean all the parts in solvent, dry them, and apply lubricant to any contact parts.

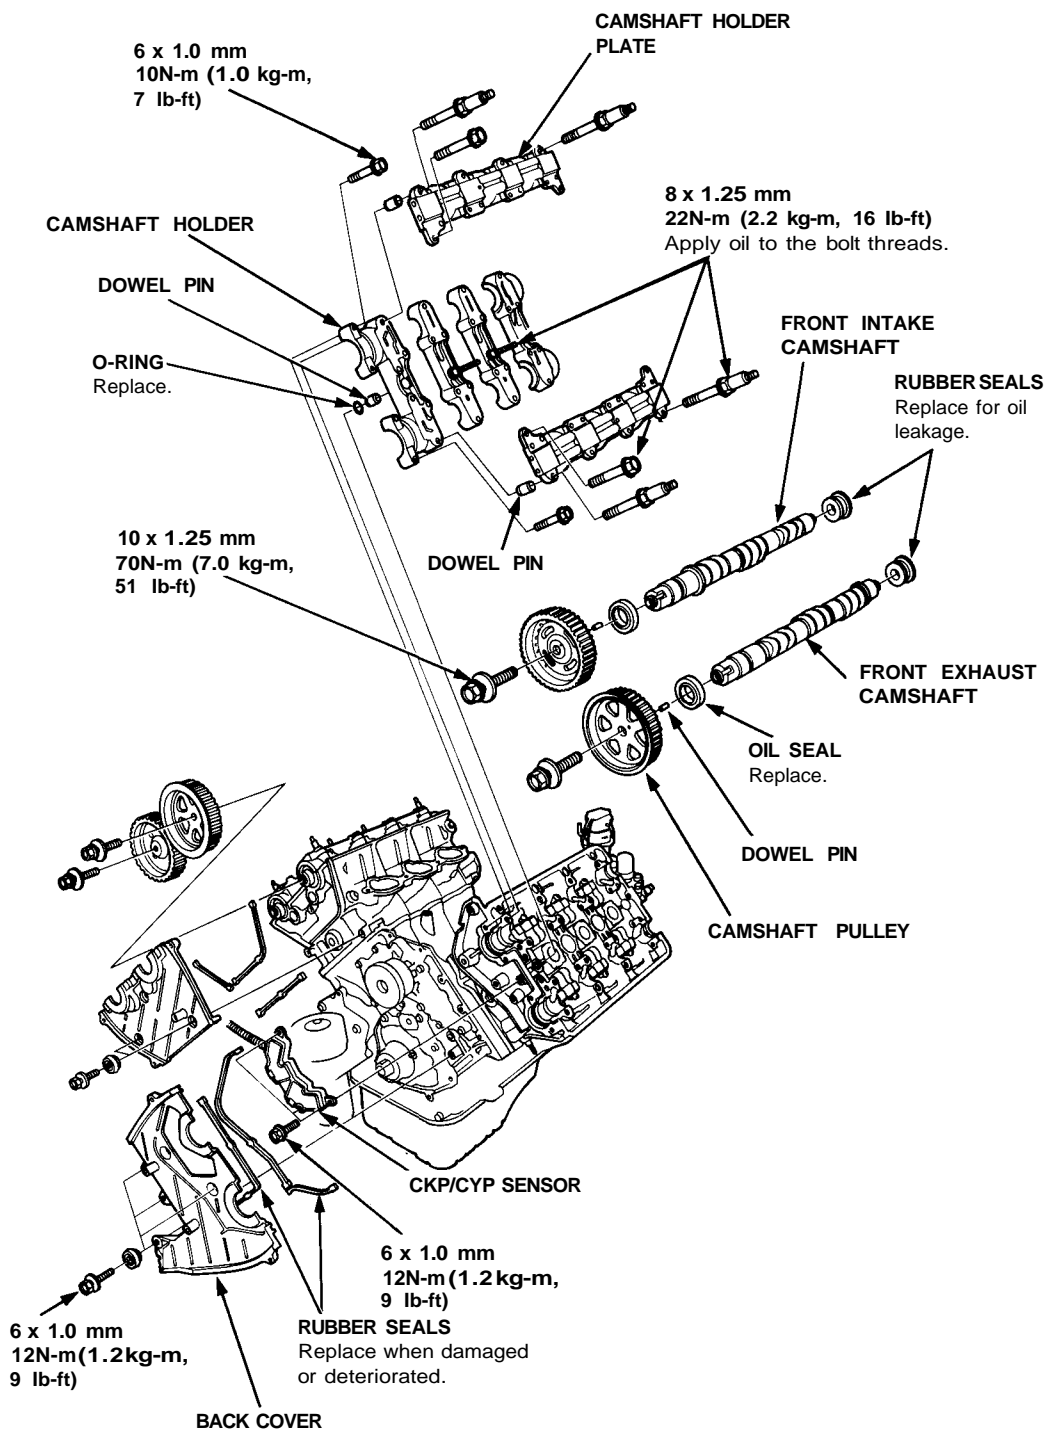

(cont'd)

Cylinder Heads

Illustrated Index (cont'd)

CAUTION: To avoid damage, wait until the engine coolant temperature drops below 100°F (39°C) before removing the cylinder head.

NOTE: Use new O-rings and gaskets when reassembling.



Prior to reassembling, clean all the parts in solvent, dry them, and apply lubricant to any contact parts.

