


Shift Lever, Select Lever




Removal

1. Remove the shift spring set plate and shift detent spring from the transmission housing.

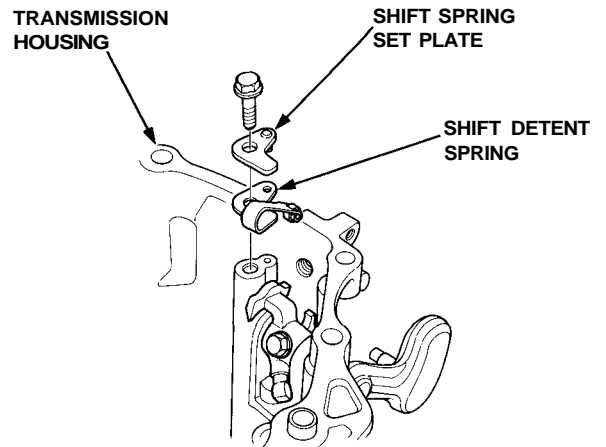

2. Remove the bolt and spring washer.
3. Pull out the shift lever, then remove the shift arm.

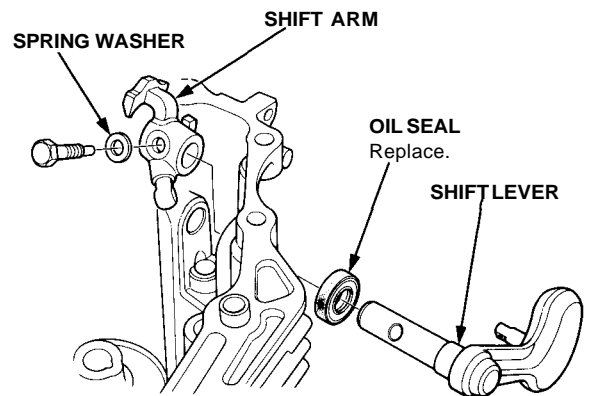

(cont'd)

Shift Lever, Select Lever

Removal (cont'd)

4. Remove the bolt and spring washer.
5. Pull out the select lever, then remove the select arm.

