



# Oil Pump

## Disassembly/Reassembly



Prior to reassembling, clean all the parts in solvent, dry them, and apply lubricant to any contact surfaces.

