



# Component Locations

## Index

### NOTE:

- If an intact airbag assembly has been removed from a scrapped car or has been found defective or damaged during transit, storage or service, it should be deployed (see [section 24](#)).
- Before removing the gearbox, remove the ignition key to lock the steering shaft.
- After installing the gearbox, check the wheel alignment and adjust if necessary.

