

# Hood

## Replacement/Adjustment

1. Disconnect the washer hose at the Y-joint, then pull it out of the hood.
2. Remove the hood by removing the hood mounting bolts on each side.
3. To remove the hood hinges, remove the front windshield lower molding.

### ALIGNMENT:

- The hood hinges can be adjusted right and left as well as fore and aft by using the elongated holes.
- The hood hinges should be shimmed to adjust the height of the hood at the rear edge.
- Adjust the hood latch to obtain the proper height at the forward edge.

4. Installation is the reverse of the removal procedure.

NOTE: Adjust the hood alignment.

