




Opener/Latch/Opener Cable Replacement

1. Remove the mounting bolts, then remove the hood release handle and disconnect the opener cable.
2. Remove the mounting bolts and cover, then remove the hood latch and disconnect the opener cable and hood switch connector.
3. Remove the left side inner fender, then pull out the opener cable.

NOTE:

- Before pulling out the opener cable, tie a string to the cable so you can pull it back in later.
- Take care not to bend the opener cable.

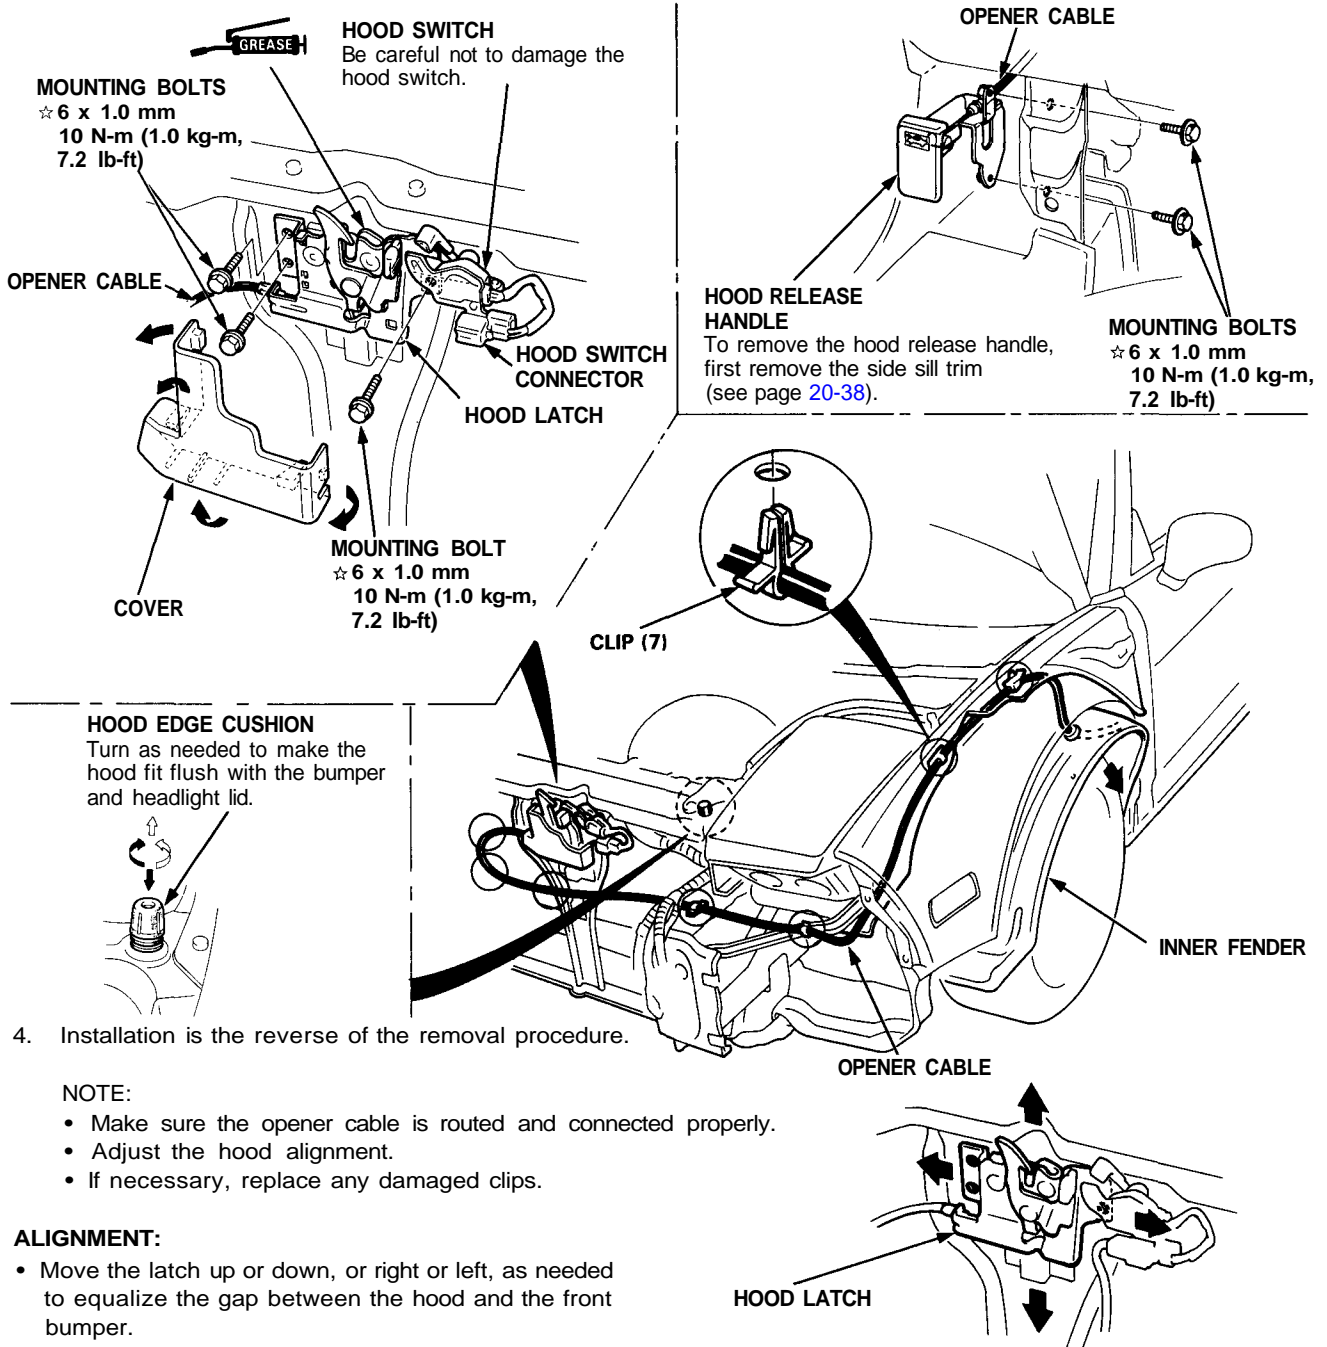

4. Installation is the reverse of the removal procedure.

NOTE:

- Make sure the opener cable is routed and connected properly.
- Adjust the hood alignment.
- If necessary, replace any damaged clips.

ALIGNMENT:

- Move the latch up or down, or right or left, as needed to equalize the gap between the hood and the front bumper.

☆: CORROSION RESISTANT BOLT