



Trunk Lid

Replacement/Adjustment

1. Remove the mounting screws, then remove the rear hatch air scoop.
2. Disconnect the high-mount brake light harness connector, and remove the harness clamp from the support strut.
3. Remove the trunk lid by removing the trunk lid mounting bolts.
4. Installation is the reverse of the removal procedure.

NOTE:

- Make sure the high-mount brake light connector is connected properly.
- Adjust the trunk lid alignment.

TRUNK LID MOUNTING BOLTS

☆ 6 x 1.0 mm
13 N-m (1.3 kg-m,
9 lb-ft)

HINGE MOUNTING BOLTS

☆ 6 x 1.0 mm
13 N-m (1.3 kg-m,
9 lb-ft)

MOUNTING SCREW


SUPPORT STRUT

SUPPORT STRUT BOLT

HIGH-MOUNT BRAKE LIGHT HARNESS

TRUNK LID HINGE

Adjust the trunk lid hinges fore and aft, and right and left as needed to equalize the gap between the trunk lid and the body.

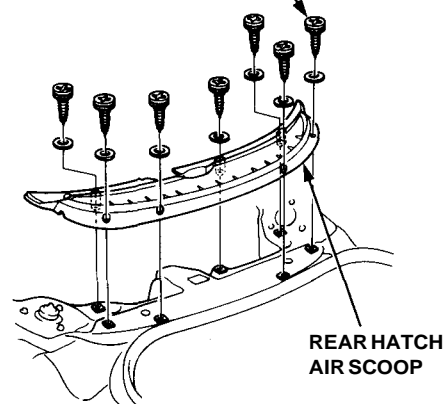

REAR HATCH AIR SCOOP

E-CLIP Replace.

SUPPORT STRUT

TRUNK LID HINGE

HARNESS CLAMP

HIGH-MOUNT BRAKE LIGHT HARNESS

TRUNK LID

HIGH-MOUNT BRAKE LIGHT HARNESS

TRUNK LID EDGE CUSHIONS

Turn as needed to make the trunk lid fit flush with the body.

☆: CORROSION RESISTANT BOLT

SHIM

Use shims as required to make the trunk lid fit flush with the body at the rear edge.

☆ 6 x 1.0 mm
10 N-m (1.0 kg-m,
7.2 lb-ft)

GREASE

STRIKER

Adjust the striker right or left to align it with the trunk lid latch.