



Rear Roof Stop Guide Replacement

CAUTION: To prevent damage, place the roof on an appropriate pad.

1. Remove the roof.
2. Remove:
 - Roof front trim (see page 20-82)
 - Roof side trim (see page 20-82)
 - Roof side lock (see page 20-83)
 - Rear roof lock guide (see page 20-90)
3. Remove the rear end of the roof side seal (see page 20-84).

NOTE: Take care not to damage the roof side seal. If it is damaged, replace it with new one.

4. Remove the screw, then remove the rear roof stop guide.
5. Installation is the reverse of the removal procedure.

NOTE:

- Install the roof side seal properly as described on page 20-85.
- Before installing the roof trim, install the roof on the body, then check that the seals fit flush (see page 20-107).

►: Screw location, 1

