



## Charging

Only use service equipment that is U.L.-listed and is certified to meet the requirements of SAE J2210 to remove HFC-134a (R-134a) from the air conditioner system.

**CAUTION:** Exposure to air conditioner refrigerant and lubricant vapor or mist can irritate eyes, nose and throat.

**Avoid breathing the air conditioner refrigerant and lubricant vapor or mist.**

If accidental system discharge occurs, ventilate work area before resuming service. Additional health and safety information may be obtained from the refrigerant and lubricant manufacturers.

**Refrigerant capacity: 800-850 g (28-30 oz)**

**CAUTION:** Do not overcharge the system; the compressor will be damaged.

Connect a R-134a refrigerant Recovery/Recycling/Charging System to the car as shown follow the equipment manufacturer's instructions.

Recovery/Recycling/Charging System

