
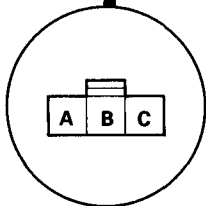


Safety Indicator (NSX-T "open top")

Roof Lock Switch Test

1. Remove the headliner (see [section 20](#)).
2. Disconnect the 3-P connector from the roof lock switch.

ROOF LOCK SWITCH

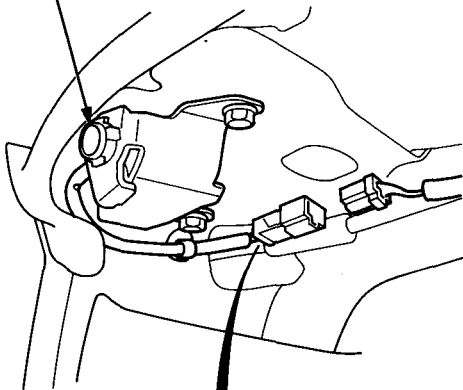

View from wire side

3. There should be continuity between the A and B terminals with the switch released (roof unlatched or off).
4. There should be no continuity with the switch pushed (roof latched).

