


Back-up Lights

Test

Manual Transmission:


1. If only one back-up light does not go on, check that bulb in the taillight.
2. If neither back-up light goes on, check the No. 5 (15 A) fuse in the under-dash fuse box.
3. If the fuse and bulbs are OK, disconnect the connector from the back-up light switch on the transmission housing.

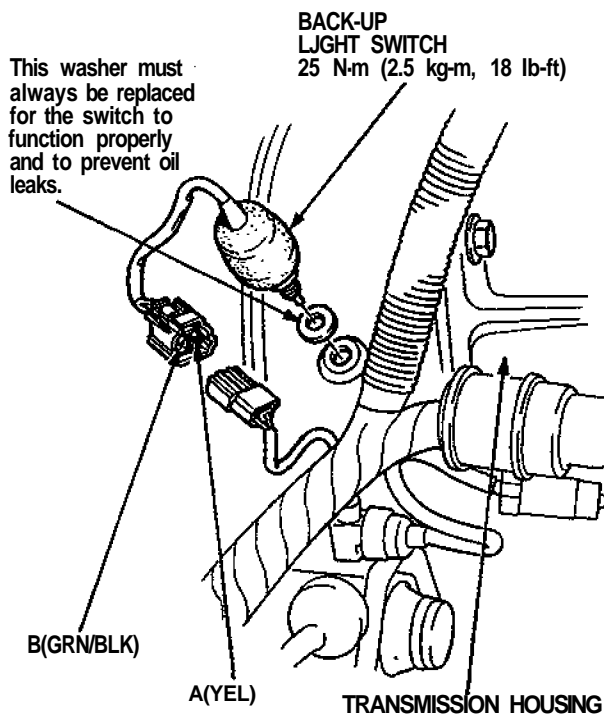

4. Check for continuity between the A (YEL) and B (GRN/BLK) wires with the switch installed. There should be continuity with the shift lever in reverse.
 - If there is no continuity, replace the switch.
 - If there is continuity, but the back-up lights do not go on, check for:
 - Poor ground (G501 '91-'92 Models or G551 '93-'96 Models)
 - An open in the YEL or GRN/BLK wire.

Automatic Transmission:

1. If only one back-up light does not go on, check that bulb in the taillight.
2. If neither back-up light goes on, check the No. 5 (15 A) fuse in the under-dash fuse box.
3. If the fuse and bulbs are OK, disconnect the 12-P connector from the A/T gear position switch (back-up light switch).

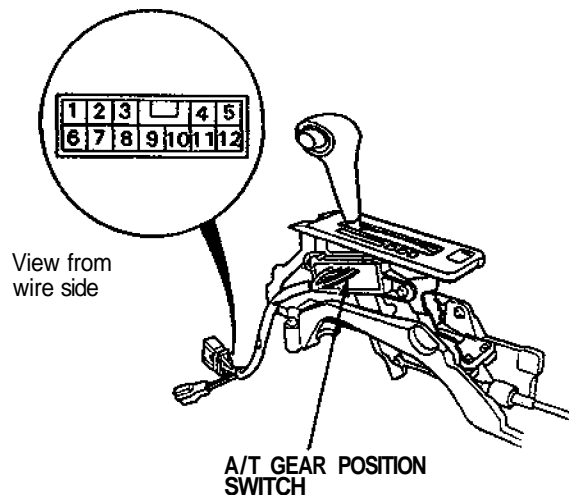

4. Check for continuity between the No. 9 and No. 10 terminals. Move the lever back and forth at the **R** position without touching the push button, and check for continuity within the range of free play.
 - If there is no continuity within the range of free play, adjust the position of the A/T gear position switch (see page 23-160) ('93-'96) ('91-'92).
 - If there is continuity, but the back-up lights do not go on, check for:
 - Poor ground (G501 '91-'92 Models or G551 '93-'96 Models)
 - An open in the YEL or GRN/BLK wire.