



# Troubleshooting

NOTE: The numbers in the table show the troubleshooting sequence.

Item to be inspected		Blown No. 35 (20 A) fuse (In the under-hood fuse/relay box)	Disconnected or obstructed door lock rod/linkage	Driver's door lock knob switch (In the left door lock actuator)	Ignition key switch	Driver's door switch	Passenger's door switch	Driver's door lock actuator	Passenger's door lock actuator	Driver's door lock switch	Passenger's door lock switch	Control unit input	Poor ground	Open circuit, loose or disconnected terminals
Power door lock system doesn't operate at all.		1										2	G401 G402 G403	ORN
Doors don't lock or unlock with the driver's door lock switch.	Both doors									1		2	G401 G402 G403	WHT/YEL or GRN/WHT <sup>2</sup>
	One door		1					2				3		WHT/RED or YEL/RED
Doors don't lock or unlock with the passenger's door lock switch.	Both doors										1	2	G401 G402 G403	BLK/RED or BLK/WHT
	One door		1					2				3		WHT/RED or YEL/RED
Doors don't lock or unlock with the driver's door lock knob.	Both doors			1								2	G401 G402 G403	BLU/WHT or BLU/RED <sup>1</sup>
	One door		1					2				3		WHT/RED or YEL/RED
Doors will lock when the key is still in the ignition switch and driver's door is open.					1	2	3					4	G401 G402 G403	GRN/RED, BLU/GRN or GRN/BLU