

Rear Window Defogger

Troubleshooting

NOTE: The numbers in the table show the troubleshooting sequence.

Item to be inspected										
Symptom	Blown indicator light bulb	Blown No 4 (15 A) fuse (In the under-dash fuse box)	Defogger timer circuit input (In the integrated control unit)	Blown No. 5 (15 A) fuse (In the under-dash fuse box)	Blown No. 11 (40 A) fuse (In the engine compartment fuse/relay box)	Rear window defogger function test	Rear window defogger relay	Broken defogger wire	Poor ground	Open circuit, loose or disconnected terminals
Defogger works, but indicator light does not go on.	1									YEL/BLK or YEL/WHT
Defogger does not work and indicator light does not go on.		1	3	2				G401 G402 G403		YEL/BLK or YEL/WHT
Defogger does not work, but indicator light goes on.					1	3	2	4	G801	YEL/WHT, YEL/BLK or BLK/GRN
Operation time is too long or too short. Normal operation time is 25 minutes (40 minutes for Canada models).			1							WHT/BLU, WHT/RED or BLK