





Switch Replacement

SRS components are located in this area. Review the SRS component locations, precautions, and procedures in the SRS [section 24](#) before performing repairs or service.

1. Remove the dashboard lower cover, and disconnect the connectors.
2. Remove the dashboard lower pad.

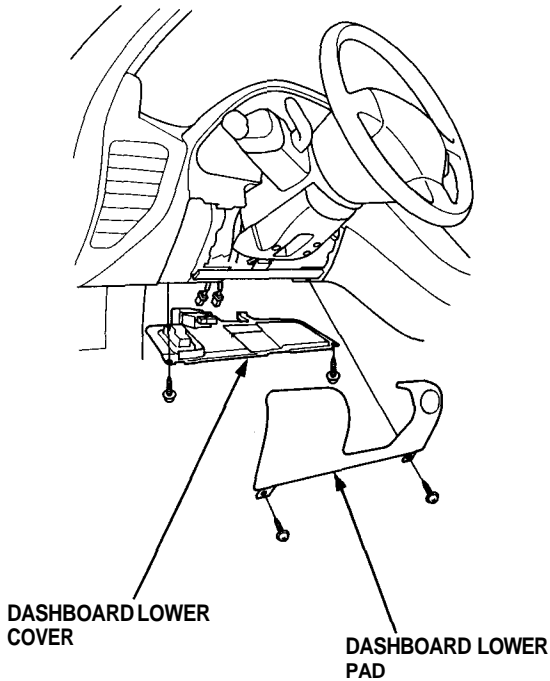


3. Remove the tilt cover.

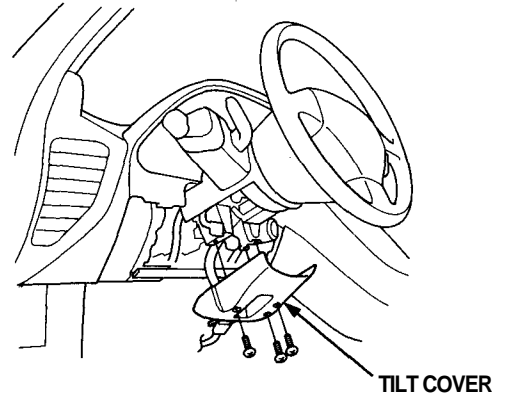

4. Remove the steering column covers.

NOTE: Be careful not to damage the steering column covers.

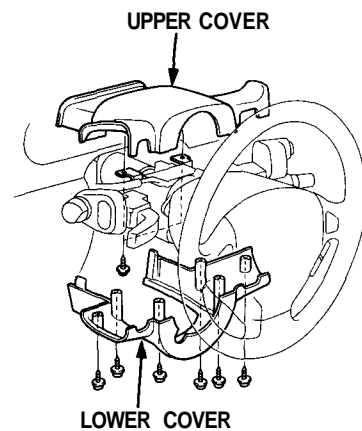

(cont'd)


Rear Window Defogger

Switch Replacement (cont'd)

5. Disconnect the 18-P and 10-P connectors.

CAUTION: Be careful not to damage the SRS wire harness.

6. Remove the six screws, then remove the rear window defogger-light switch assembly.

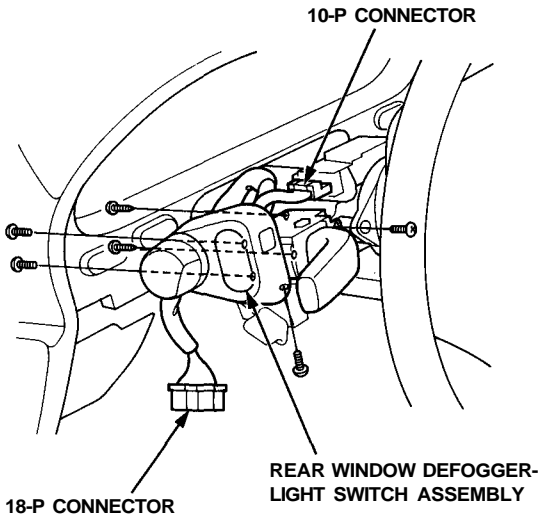

7. If necessary, replace the rear window defogger switch bulbs.

