


## Switch Test

1. Remove the dashboard lower cover (see page [23-285](#)).
2. If necessary, remove the dashboard lower pad.
3. Disconnect the 18-P connector from the floor wire harness.
4. Check for continuity between the terminals in each switch position according to the table.

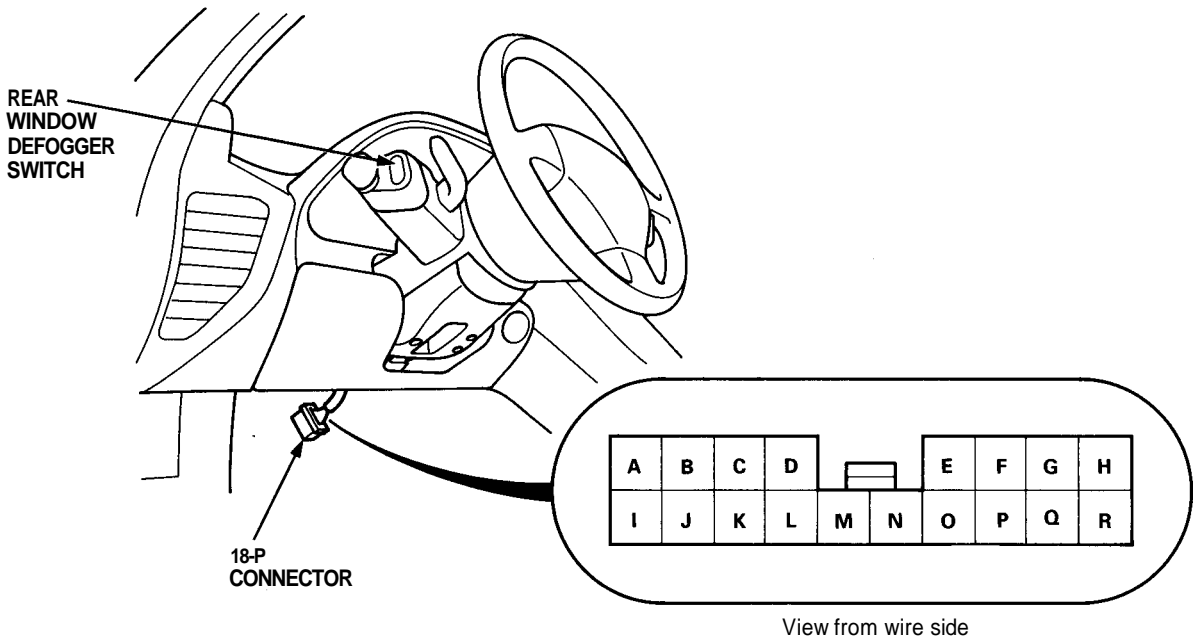

Terminal	B	I	H		R	A		Q
Position								
PUSHED	○	○				○		
RELEASED			○	⊖	○	○	⊖	○

