
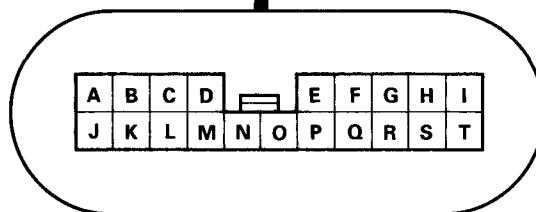


# Cruise Control

## Main Switch Test

1. Remove the dashboard lower cover (see page [23-305](#)).
2. If necessary, remove the dashboard lower pad.
3. Disconnect the 20-P connector, and check for continuity between the terminals, in each switch position, according to the table.

Terminal	M	L		B	H		G
Position							
OFF		○	⊖	○	○	⊖	○
ON	○	○	⊖	○	○	⊖	○

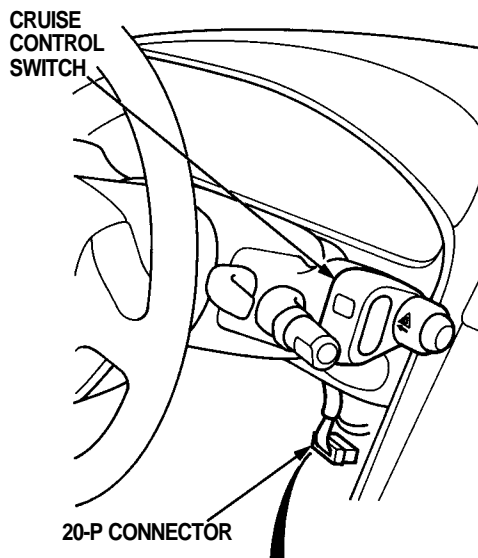

View from wire side

