

Crankshaft Position (CKP)/Cylinder Position (CYP) Sensor



Replacement

NOTE: Turn the crankshaft so that the No. 1 piston is at top dead center (page 6-25, 26).

1. Remove the timing belt (page 6-23, 24).
2. Remove the front intake and exhaust camshaft pulleys.
3. Remove the front timing belt cover plate.
4. Remove the CKP/CYP sensor from the front cylinder head.

5. Install the CKP/CYP sensor in the reverse order of removal;
 - Refer to page 6-25 and 26, when installing the timing belt.

