


2nd Accumulator Body

Disassembly/Inspection/Reassembly

NOTE:

- Clean all parts thoroughly in solvent or carburetor cleaner, and dry with compressed air.
- Blow out all passages.
- Replace valve body as an assembly if any parts are worn or damaged.
- Check all valves for free movement. If any fail to slide freely, see Valve Body Repair on page 14-109.
- Coat all parts with ATF before reassembly.

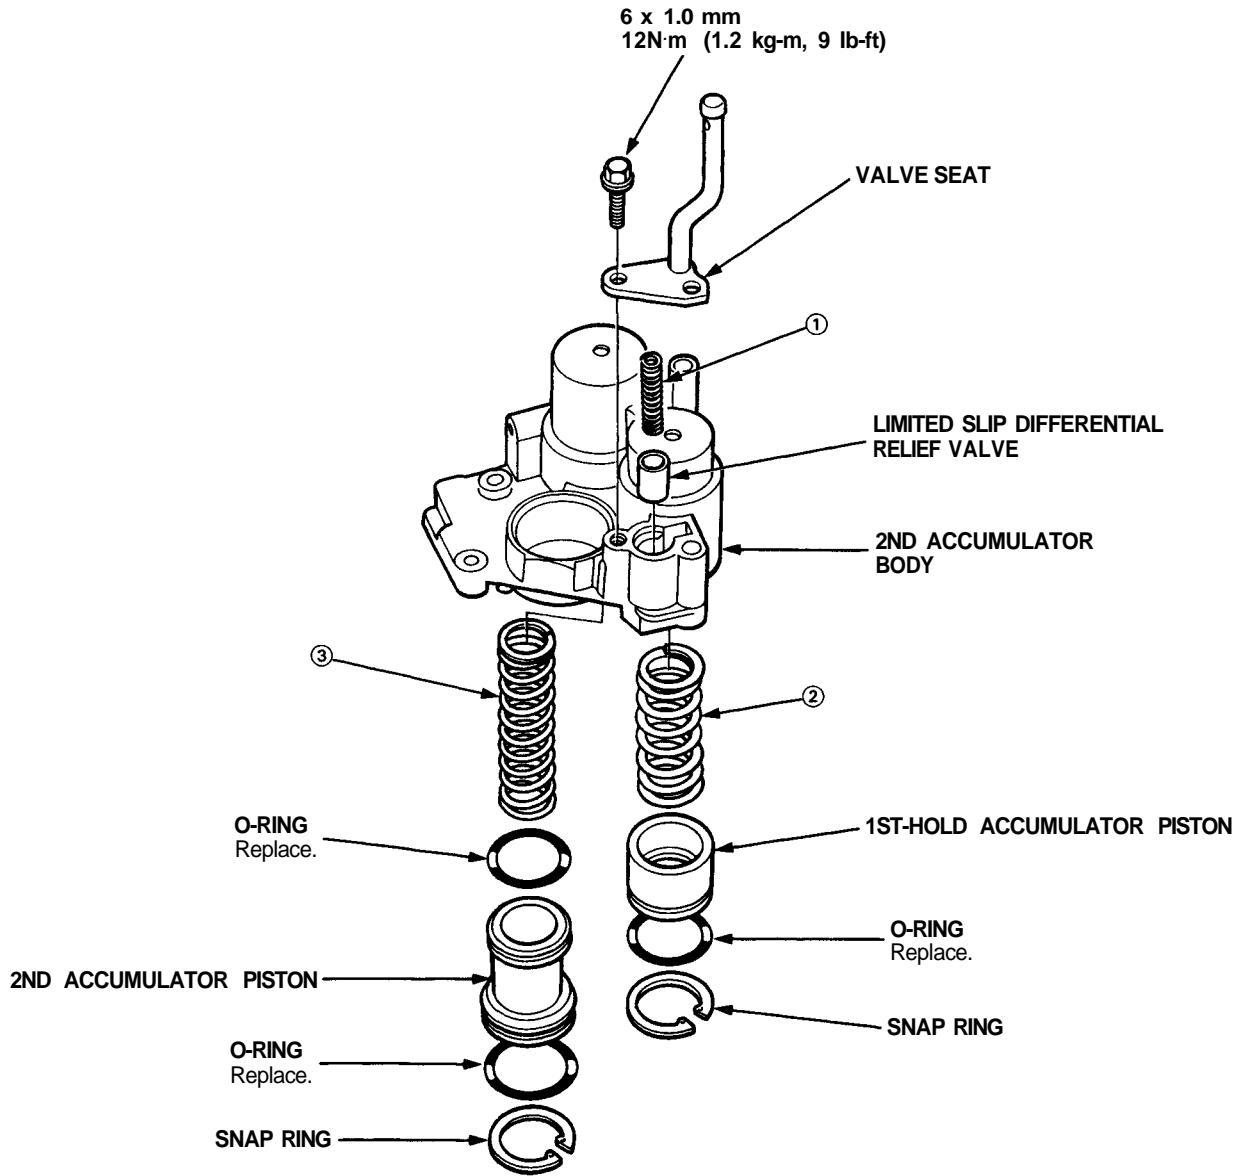

SPRING SPECIFICATIONS

Unit of length: mm (in)

No.	Spring	Standard (New)			
		Wire Dia.	O.D.	Free Length	No. of Coils
①	Limited Slip Differential relief valve spring	0.8 (0.031)	8.4 (0.331)	37.3 (1.469)	12.1
②	1st-hold accumulator spring	3.4 (0.134)	24.3 (0.957)	64.7 (2.547)	6.7
③	2nd accumulator spring	3.3 (0.130)	20.2 (0.795)	78.0 (3.071)	11.8