




Seat Belts

Replacement

CAUTION: Check the seat belts for damage and replace them if necessary. Be careful not to damage them during removal and installation.

NOTE: Remove the anchor bolts with a 17 mm socket or box-end wrench.

- To remove the seat belts, first remove the seats (page 20-38).
NOTE: Take care not to scratch the interior trim, dashboard and center armrest.
- Remove the cap and remove the lower anchor bolt.
- Remove the center anchor bolt, and disconnect the connector.
- Remove the rear pillar trim panel and side panel (page 20-37).
- Remove the upper anchor bolt and retractor bolts.

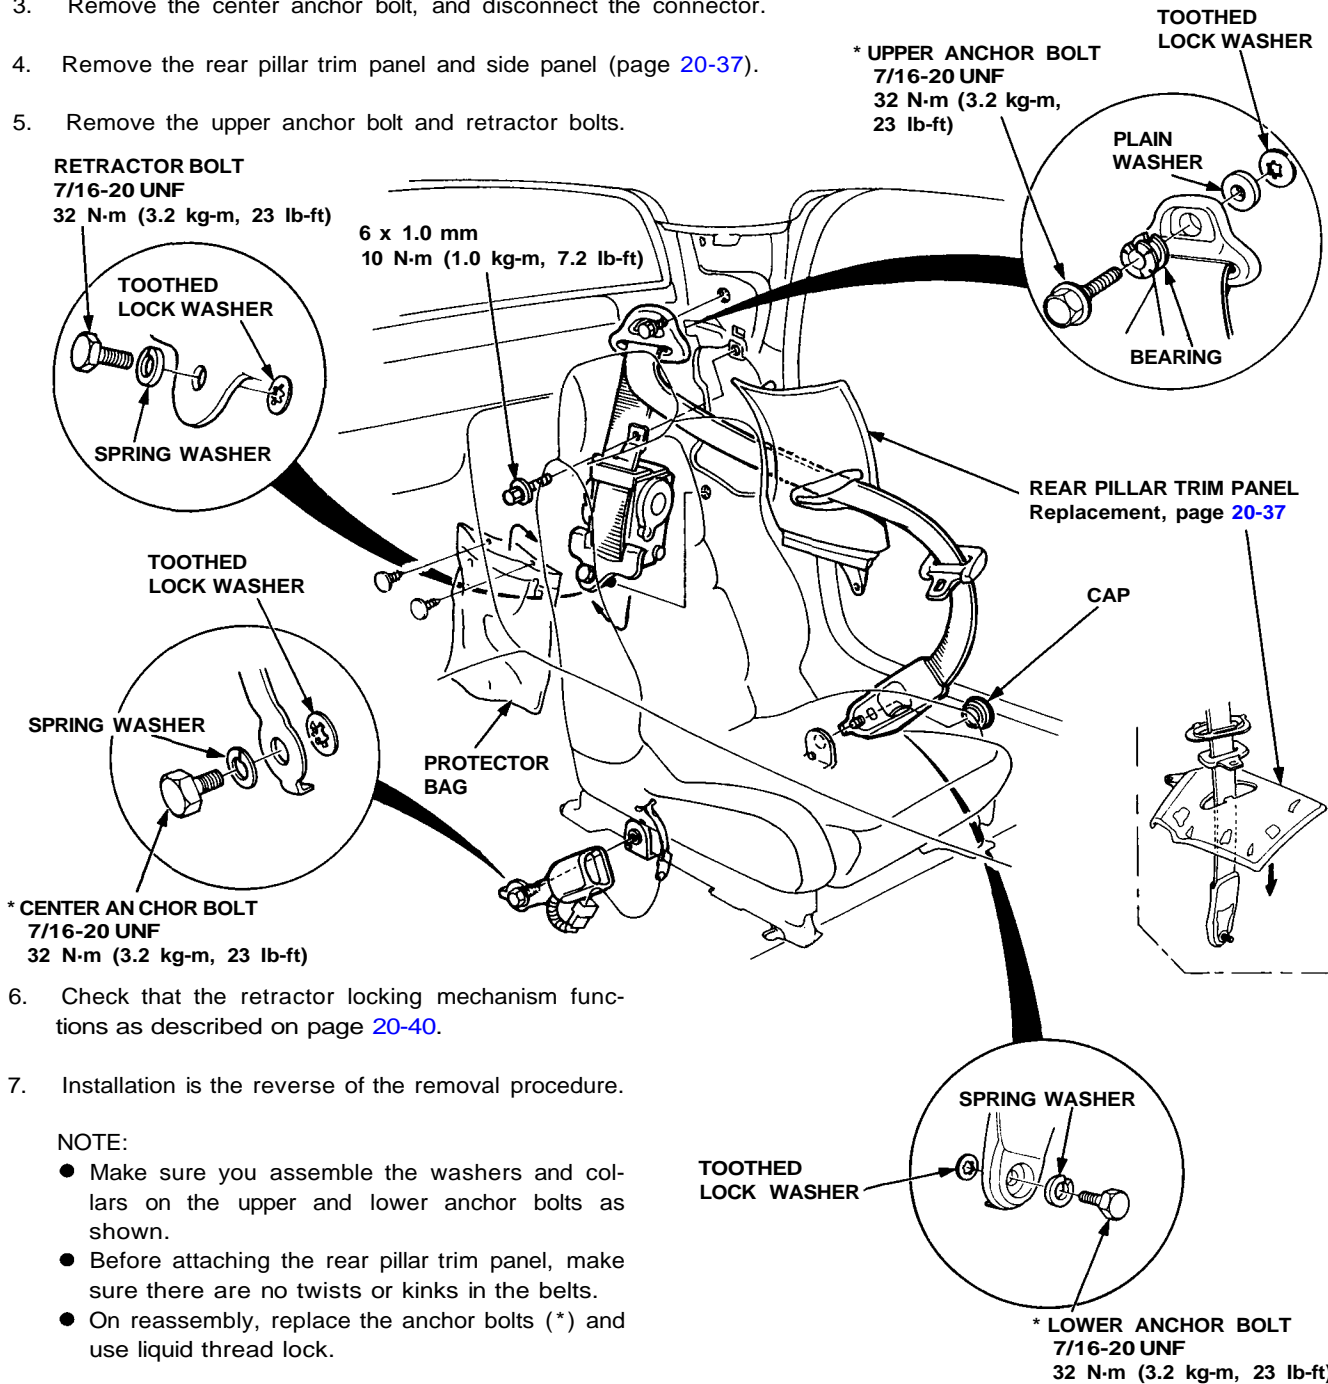

6. Check that the retractor locking mechanism functions as described on page 20-40.

7. Installation is the reverse of the removal procedure.

NOTE:

- Make sure you assemble the washers and collars on the upper and lower anchor bolts as shown.
- Before attaching the rear pillar trim panel, make sure there are no twists or kinks in the belts.
- On reassembly, replace the anchor bolts (*) and use liquid thread lock.