



Troubleshooting

NOTE: The numbers in the table show the troubleshooting sequence.

Item to be inspected	in the engine compartment fuse/relay box			in the under-hood fuse/relay box	Faulty indicator light (LED)	Horn circuit	Starting system	A/T: Shift position console switch M/T: Clutch interlock switch	Lighting system	Door key switch	Ignition key switch	Trunk key switch	Trunk latch switch	Hood switch	Engine cover switch	Door switch	Control unit input	Poor ground	
	Blown No. 18 (20A) fuse	Blown No. 5 (10A) fuse	Blown No. 45 (20A) fuse																
Security alarm can't be set (and indicator light does not flash).	1	2	3	4							5							G401 G402 or G404	YEL/BLU, YEL, WHT/GRN, GRN or BLU/GRN
Starting system is not operated.							1	2									3	G401 G402 or G404	BLK/WHT, BLK/GRN or BLK/YEL
Security alarm can be set, but alarm not operated when the trunk, hood or either door is unlocked without the key.	Horn alarm			1	2												3		WHT/GRN, ORN/BLK, YEL/GRN ¹ or LT GRN/WHT
	Headlight alarm								1								2		LT GRN/RED, BLU/RED ¹ or RED/YEL
	Both alarms																1		
Alarm not cancelled when the door keylock is unlocked with the key.										1							2	G401 G402 or G404	GRN/YEL ¹ , GRN/YEL ² , BLU/RED ² or BLU/RED ³
Alarm not cancelled when the key is inserted in the ignition switch.	1										2						3		YEL
Alarm not cancelled when the trunk lid is opened with the key.												1	2				3	G501	BRN/WHT or WHT
Alarm not operated when the hood is opened.														1			2	G301	YEL/GRN ²
Alarm not operated when the engine cover is opened.															1		2	G401 G402	BLU
Alarm not operated when the doors is opened.																1	2	G401 G402	GRN/BLU or GRN/RED