


Wheel Alignment

Front Turning Angle Inspection

NOTE:

- Place a car on a level surface before inspection.
 - Release the parking brake and be sure that the car is empty.
 - Check that the suspensions are at the standard height (see page 18-6).
1. Turn the steering wheel fully to the right and left while applying the brake, and measure the turning angle of both wheels.

Turning angle: Inward: $33^{\circ}06' \pm 2^{\circ}$
Outward: $26^{\circ}34'$ (Reference value)

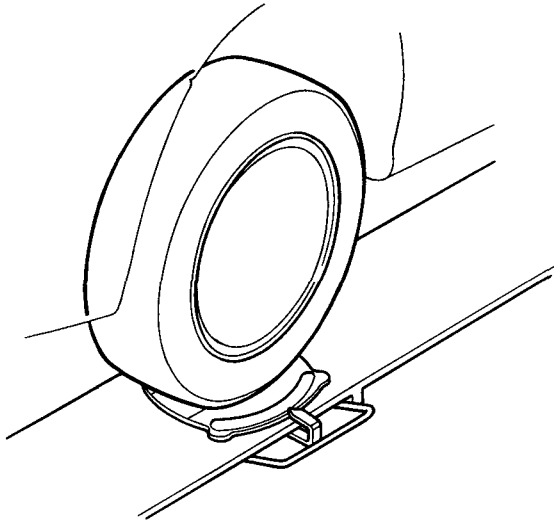

2. If the measurements are not within the specifications or if the inward turning angles differ between the right and left, check the toe and adjust accordingly (see page 18-8).
3. If the toe adjustment is within specifications, and turning angle is still off, check for bent or damaged suspension components.