


# Pulsers/Sensors

## Front Sensor Replacement

**NOTE:**

- Be careful when installing the sensors to avoid twisting the wires.
- After sensor replacement confirm proper operation (see page 19-43).

☆: CORROSION RESISTANT BOLT    ☆ 6 x 1.0 mm  
10 N-m (1.0 kg-m, 7 lb-ft)

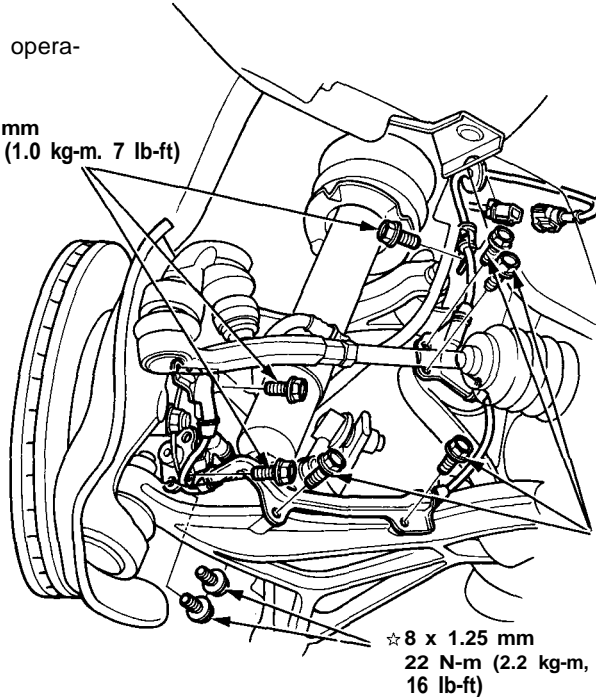

☆ 6 x 1.0 mm  
10 N-m (1.0 kg-m,  
7 lb-ft)

☆ 8 x 1.25 mm  
22 N-m (2.2 kg-m,  
16 lb-ft)

## Rear Sensor Replacement


**NOTE:**

- Be careful when installing the sensors to avoid twisting the wires.
- After sensor replacement, confirm proper operation (see page 19-43).

☆: CORROSION RESISTANT BOLT

☆ 8 x 1.25 mm  
22 N-m (2.2 kg-m, 16 lb-ft)

☆ 6 x 1.0 mm  
10 N-m (1.0 kg-m, 7 lb-ft)

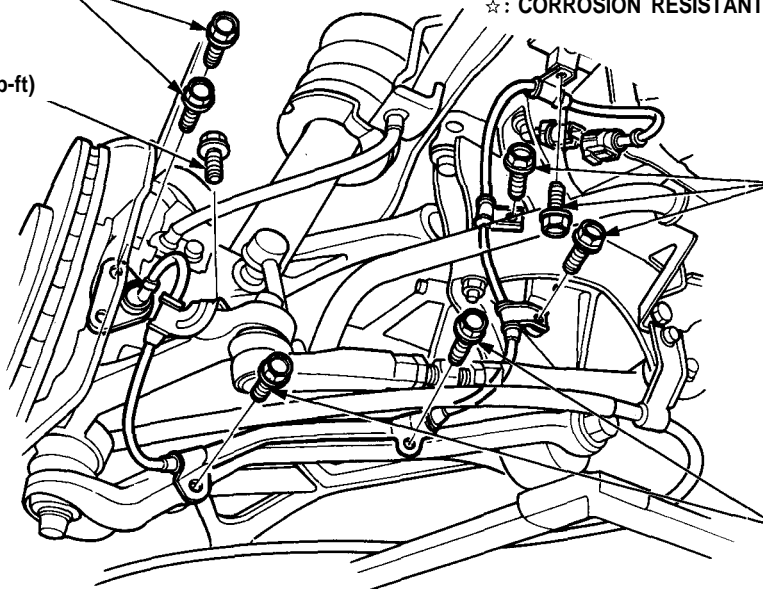

☆ 6 x 1.0 mm  
10 N-m (1.0 kg-m,  
7 lb-ft)

☆ 6 x 10 mm  
10 N-m (1.0 kg-m,  
7 lb-ft)