

# Front and Center Pillar Retainer/Upper Weatherstrip/ Center Pillar Panel



## Replacement

Disassemble in numbered sequence.

**CAUTION:** Wear gloves to remove and install the retainer.

**NOTE:**

- Check the upper weatherstrip for damage and deterioration, and replace it if necessary.
- Take care not to bend the front and center pillar retainer.
- After installing the upper weatherstrip, check for water leaks.
- If necessary: Adjust the position of the door glass (see page 20-14('93-'96),13('91-'92).
- If necessary: Replace any damaged clips.

