


# Sunlight Sensor

## Removal

With a small screwdriver, carefully pry the sunlight sensor out of the dashboard and disconnect its connector. Protect the dashboard; cover it with a shop towel before you pry against it.

SUNLIGHT  
SENSOR

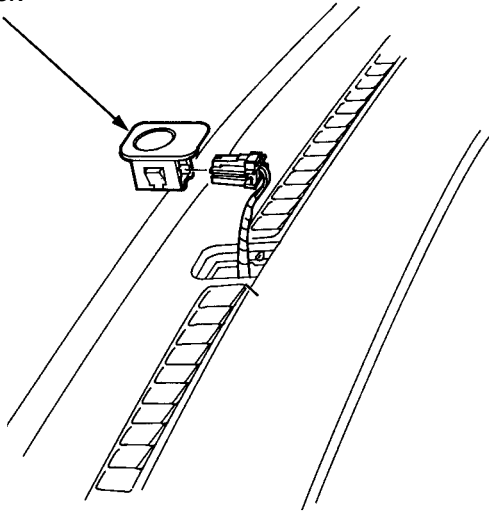

## Test

Measure the voltage between the terminals with the sensor out of direct sunlight.

- With the connector connected (probe the back of it):  $1.4 \pm 0.2$  V
- With the connector disconnected: 0.1 — 0.2 V

