

# Safety Indicator

## Troubleshooting

NOTE: The numbers in the table show the troubleshooting sequence.

Symptom	Blown No. 5 (15 A) fuse (In the under-dash fuse box)	Safety indicator input	Safety indicator (diodes)	Brake light failure sensor	Door switch	Trunk latch switch	Retractable headlight control unit (see page 23-178)	Roof holder switch	Roof lock switches	Poor ground	Open circuit, loose or disconnected terminals
No indicator operates.	1	2								G401 G402 G403	YEL
Indicator lights fail to come on when ignition switch is turned to ON (II).		1									
Door indicator lights are not on with doors open.		2		1							GRN/BLU or GRN/RED
Trunk indicator light is not on with trunk lid open.		2			1						GRN/BLK
Brake indicator light is not on with blown brake light bulb.		1									ORN/WHT or GRN
Brake indicator light remains on with good brake light bulbs.		2		1					G551		
Ceiling light is not on with door open (with switch in MIDDLE position).			1								BLK/WHT
Retractor motor indicator light remains on with good retractor motor.		1				2					
Retractor motor indicator light is not on with faulty retractor motor.		1				2					RED/YEL or RED/YEL <sup>1</sup>
Roof warning light is not on with the roof unlatched or off* <sup>1</sup> .		1						2	3		RED/YEL <sup>2</sup> BLU/GRN RED/GRN RED/YEL <sup>3</sup>

\*1: NSX-T (open top) only