


Lighting System

Retractor Motor Test

1. Remove the retractor motor.
2. Test the motor by connecting battery power to the A terminal and ground to the D terminal. The motor should run continuously.
3. If the motor does not run or fails to run smoothly, replace it.

NOTE: The illustration shows the motor in the condition when the headlight is fully raised.

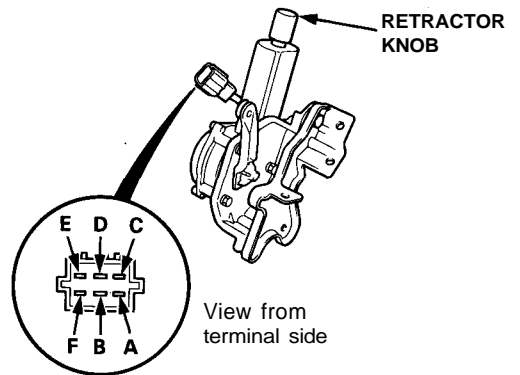

4. Disconnect the power supply, and check for continuity between the terminals according to the table while turning the retractor knob clockwise.

Terminal	B	C			E	F
Position						
At closed position	○	○	→	→	○	
At open position	○	○	→	→	○	

