




Replacement

SRS components are located in this area. Review the SRS component locations, precautions, and procedures in the SRS [section 24](#) before performing repairs or service.

1. Remove the clock (see page [23-231](#)).
2. Remove the two screws behind the clock, then remove the center air vent (see [section 20](#)).
3. Remove the four screws, then remove the center armrest.
4. Take out the ashtray.
5. Remove the five screws and center console panel, then disconnect the 3-P connector and 4-P connector from the floor wire harness.

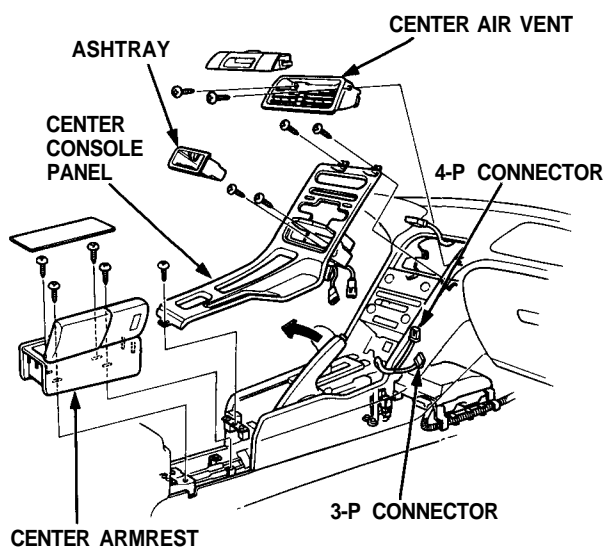

6. Disconnect the thermo fuse case from the end of the cigarette lighter socket.
7. Remove the ring nut, and separate the cigarette lighter socket from the thermal protector.
8. When installing the cigarette lighter, align each lug on the face panel, illumination ring and cigarette lighter socket with the groove in the hole, then position the bulb housing on the thermal protector between the stops on the center console panel.
9. Make sure that the ground, bulb socket and thermo fuse case are seated against the cigarette lighter assembly.

