


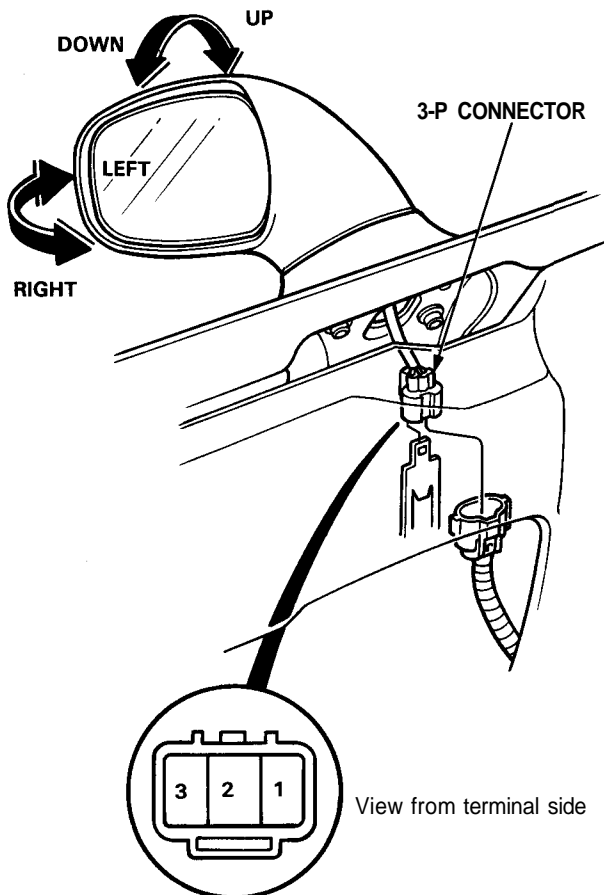


Door Mirror Test

1. Remove the door panel, and carefully remove the plastic cover (see [section 20](#)).
2. Disconnect the power mirror 3-P connector.
3. Test actuator operation:
TILT UP: Connect battery power to the No. 3 terminal and ground to the No. 2 terminal.
TILT DOWN: Connect battery power to the No. 2 terminal and ground to the No. 3 terminal.
SWING LEFT: Connect battery power to the No. 2 terminal and ground to the No. 1 terminal.
SWING RIGHT: Connect battery power to the No. 1 terminal and ground to the No. 2 terminal.
4. If the mirror fails to operate properly, replace it.



Door Mirror Replacement

1. Remove the door panel, and carefully remove the plastic cover (see [section 20](#)).
2. Disconnect the 3-P connector.

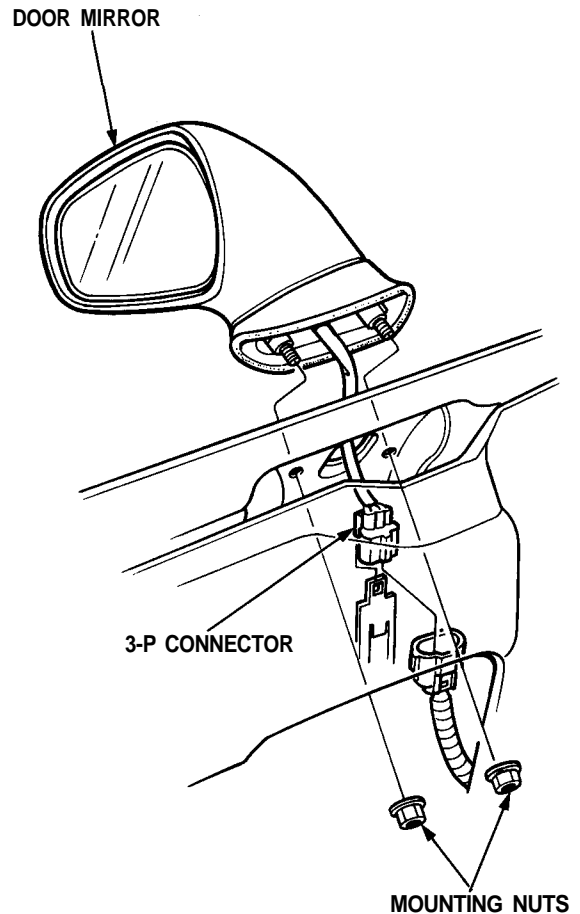

3. Remove the two mounting nuts while holding the mirror.
4. Install in the reverse order of removal.