


# Power Door Locks

## Driver's Door Actuator Test

1. Remove the door panel (see [section 20](#)).
2. Disconnect the 8-P connector from the actuator.

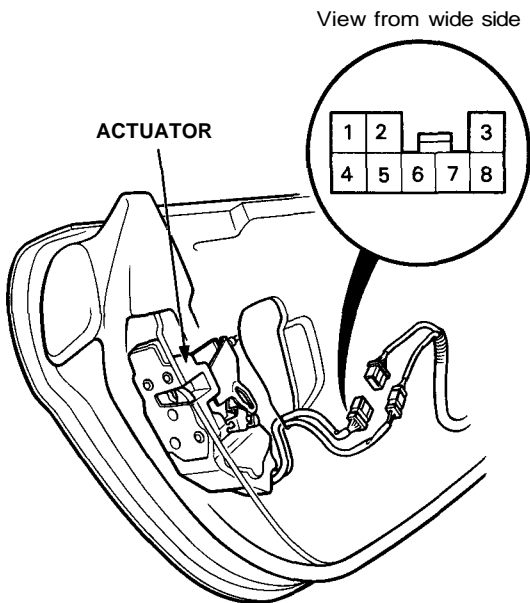

3. Test actuator operation:

**LOCK:** With battery power connected to the No. 7 terminal, connect ground to the No. 8 terminal momentarily.

**UNLOCK:** With battery power connected to the No. 8 terminal, connect ground to the No. 7 terminal momentarily.

**CAUTION:** To prevent damage to the motor, connect power and ground only momentarily.

4. If the actuator fails to operate properly, replace it.

5. Check for continuity between the terminals in each switch position according to the table.

### Key Cylinder Switch:

| Terminal | 1 | 2 | 3 |
|----------|---|---|---|
| Position |   |   |   |
| UNLOCK   | ○ | ○ |   |
| NEUTRAL  |   |   |   |
| LOCK     |   | ○ | ○ |

### Door Lock Knob Switch:

| Terminal | 4 | 5 | 6 |
|----------|---|---|---|
| Position |   |   |   |
| LOCK     | ○ |   | ○ |
| UNLOCK   | ○ | ○ |   |

