




Master Switch Test

1. Remove the door panel (see [section 20](#)).
2. Disconnect the 12-P connector.
3. Check for continuity between the terminals in each switch position according to the tables.

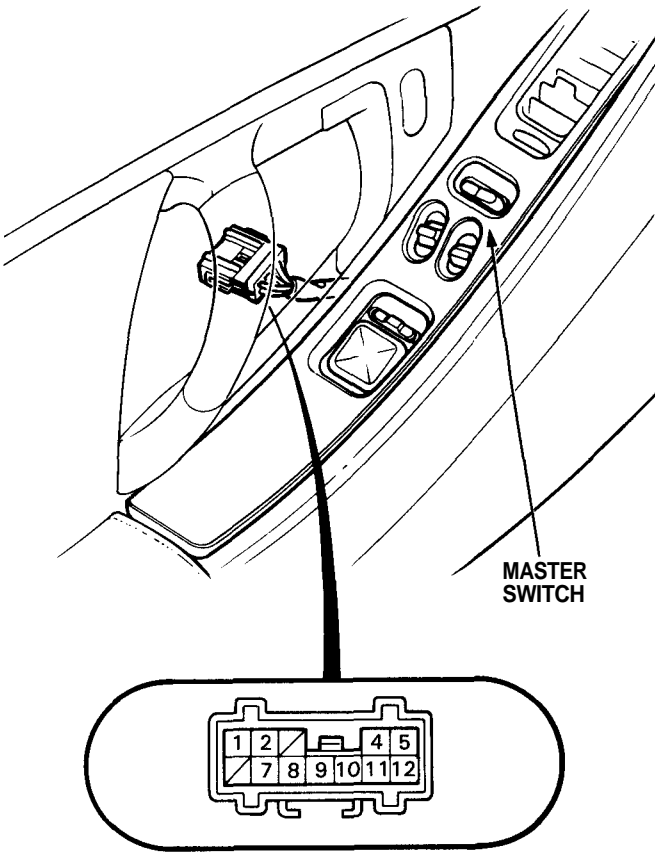

View from wire side

Driver's Switch

Terminal	2	5	1	12
Position				
UP	○	○		
OFF				
DOWN		○	○	
DOWN (AUTO)		○	○	○

Passenger's Switch

Terminal		4	11	9	10
UP	Main Switch				
	ON	○	○	○	○
OFF	ON		○	○	○
	OFF	○	○	○	○
DOWN	ON	○			○
	OFF	○	○	○	○

Switch Light

8		7
○	○	○