





## Windshield Wiper Motor Test

1. Open the hood, and remove the cap nuts and the wiper arms. Don't let the wiper arms hit the hood.

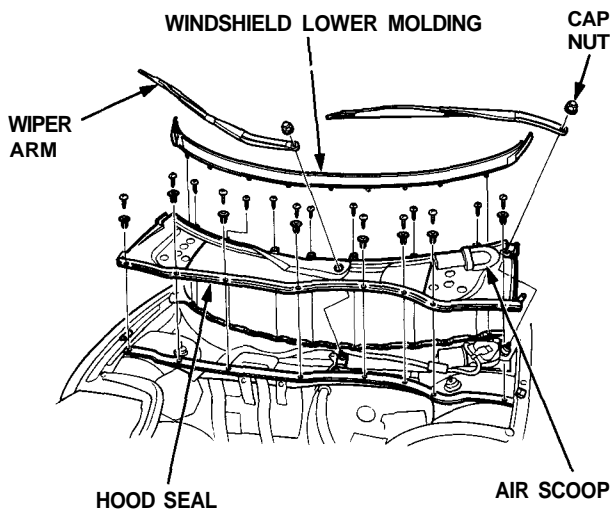

2. Remove the windshield lower molding, hood seal and air scoop by prying off the trim clips and removing the screws.
3. Disconnect the 5-P connector from the wiper motor assembly.

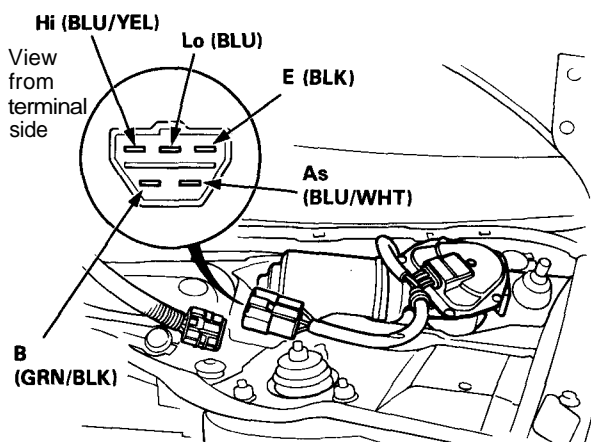


4. Test motor operation:

LOW SPEED: Connect battery power to the B (GRN/BLK) terminal and ground to the Lo (BLU) terminal.

HIGH SPEED: Connect battery power to the B (GRN/BLK) terminal and ground to the Hi (BLU/YEL) terminal.

If the motor fails to run smoothly, replace it.

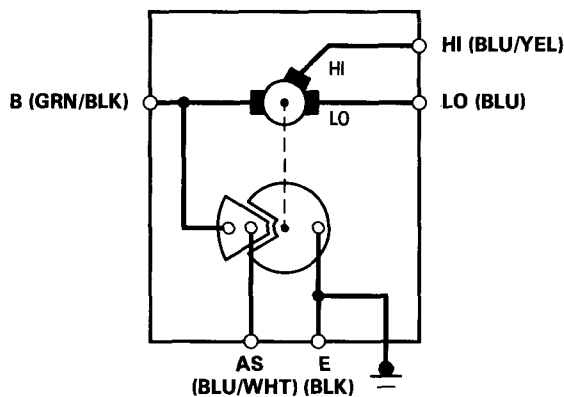

5. Connect an analog voltmeter, between the As (BLU/WHT) and the E (BLK) terminals. Run the motor by connecting battery power to the B (GRN/BLK) terminal and ground to the Lo (BLU) terminal.

The voltmeter reading should alternately indicate 0 V and more than 4 V.