





Washer Replacement

1. Disconnect the hose and the 2-P connectors from the washer motor.
2. Remove the bumper, then remove the washer reservoir by removing the three mounting bolts.

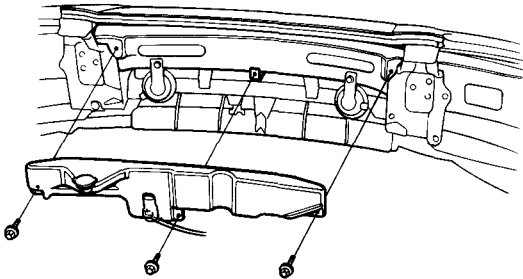


3. Remove the washer nozzles.
4. Install the washer nozzles, and take note of the following:
 - Clip the hose to the front harness.
 - Take care not to pinch hoses during reinstallation.
 - Install the clips firmly.
 - After installation, adjust the washer nozzles.

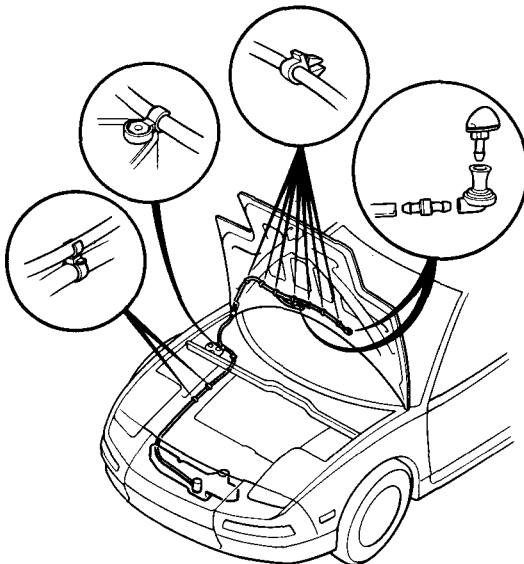

Windshield Washer Motor Test

1. Disconnect the 2-P connector from the washer motor and remove the front bumper.
2. Test the washer motor operation by connecting power to the ⊕ terminal and ground to the ⊖ terminal.

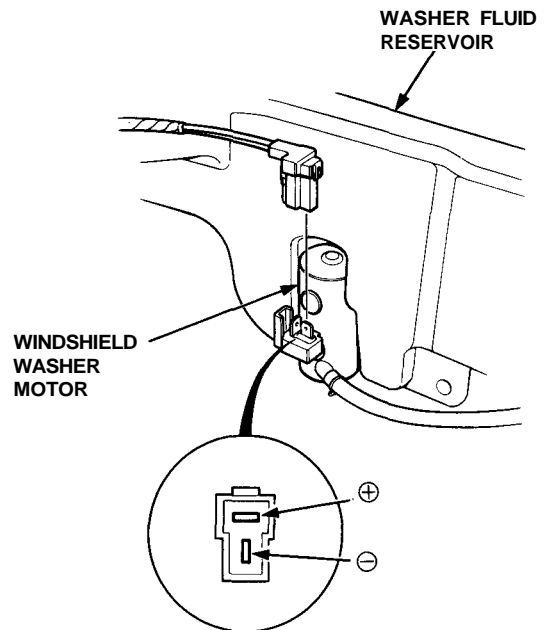

- If the motor fails to run smoothly, replace it.
- If the motor runs smoothly but little or no washer fluid is pumped, check for a disconnected or blocked washer hose, or a clogged pump outlet in the motor.