

Cruise Control

Troubleshooting

- NOTE:
- The numbers in the table show the troubleshooting sequence.
 - Before troubleshooting:
 - Check the No. 5 (15 A) fuse in the under-dash fuse box, and the No. 29 (50 A) and No. 45 (20 A) fuses in the under-hood fuse/relay box.
 - Check that the horns sound.
 - Make sure that the headlights go off.

Items to be inspected Symptom	Control switch	SET/RESUME switch	Brake switch/adjustment	Clutch switch/adjustment (M/T)	A/T gear position switch (A/T)	VSS	Dimming circuit in gauges	ECM	Poor ground	Open circuit, loose or disconnected terminals
Cruise control can't be set.	2	3	4	5				1	G101 G401 G402 G403	BLU/RED, LT GRN/RED, LT GRN, GRY, BLU/ORN, GRN/WHT or ORN
Cruise control can be set, but indicator light does not go on.							2	1	G401 G402 G403	YEL or BLU/BLK
Cruise speed is noticeably higher or lower than what was set.						1		3		
Excessive overshooting and/or undershooting when trying to set speed.						2		3		
Steady speed is not held even on a flat road with cruise control set.						1		3		
Car does not decelerate or accelerate accordingly when SET or RESUME button is pushed.		1						2		LT GRN/BLK LT GRN/RED
Set speed is not canceled when clutch pedal is pushed (M/T).				1				2		
Set speed is not canceled when shift lever is moved to N (A/T).					1			2		
Set speed is not canceled when brake pedal is pushed.			1					2		
Set speed is not canceled when control switch is pushed OFF.	1							2		
Set speed is not resumed when RESUME button is pushed (With main switch on, but set speed temporarily canceled).		1						2		