

# PGM-FI System

## Troubleshooting Flowchart – Engine Will Not Start

Engine will not start.

Watch the Malfunction Indicator Lamp (MIL) and turn the ignition switch ON.

Did the MIL come on at all?

NO

Perform troubleshooting on page 11-43.

YES

Did the MIL go off after two seconds?

NO

Perform troubleshooting on page 11-44.

YES

Turn the ignition switch OFF.

Connect the test harness between the ECM and connectors (see page 11-37).

Turn the ignition switch ON.

Measure voltage between body ground and the following terminals individually: A23, A24.

Is there less than 1.0 V?

NO

Repair open in wire between ECM and G101 (located at right middle of engine) on wire that more than 1.0 V.

YES

Inspect fuel pressure (see page 11-106).

Is fuel pressure OK?

NO

Repair as necessary.

YES

Perform ignition system check (see section 23).

