

Idle Control System


Troubleshooting Flowchart — Starter Switch Signal

This signals the ECM when the engine is cranking.

Inspection of starter switch signal.

Connect the test harness between the ECM and connectors (see page 11-37).

Measure voltage between C11 (+) terminal and A26 (-) terminal with the ignition switch in the start position.

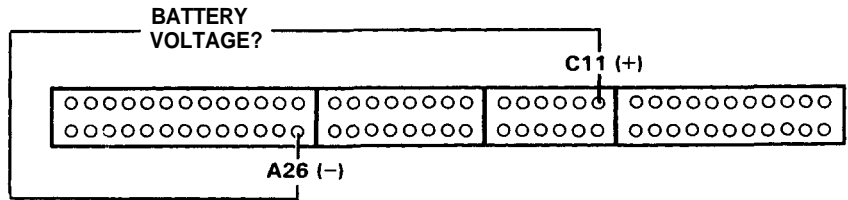

- NOTE:
- M/T: Clutch pedal must be depressed.
 - A/T: in **N** or **P** range.

