



Troubleshooting

NOTE: The numbers in the table show the troubleshooting sequence.

Item to be inspected		Symptom													Poor ground	Open circuit, loose or disconnected terminals
		Blown No. 31 (30 A), No. 36 (10 A) or No. 37 (10 A) fuse (In the under-hood fuse/relay box)	Blown No. 24 (10 A) fuse (In the engine compartment fuse/relay box)	Blown No. 4 (15 A) fuse (In the under-dash fuse box)	Relays	Radiator fan resistor	Radiator fan control sensor	Radiator fan motor	Engine compartment fan motor	Condenser fan motors	* A/C and ECM systems	Faulty fan control unit	Faulty A/C triple pressure switch			
Only one fan runs (with engine and A/C ON).		1	2					3	4	5						WHT ² , WHT ³ , WHT/BLU ³ , WHT/GRN ² or WHT/BLU ¹
Fans do not run.	Under all conditions.			1	2		4					3		G403	YEL/BLK	
	At low speed.	1	2		3	4						5		G302 or G403	YEL/BLK, WHT ² or RED	
	At high speed.				1				2			3		G102, G202 or G403	YEL/BLK, WHT/BLU ² , BLU/RED or WHT/BLU ¹	
Compressor clutch does not engage as necessary.		1			2						3	5	4	G302 or G403	WHT/BLU ³ , WHT ³ , BRN/BLK or ORN/BLU	

*: Refer to [section 22](#) for A/C pressure inspection of the A/C system.