



# Troubleshooting

NOTE: The numbers in the table show the troubleshooting sequence.

Item to be inspected  Symptom	In the under-dash fuse box				In the under-hood fuse/relay box		Power window relay	Control unit input	Master switch	Passenger's switch	Driver's motor	Pulser (In driver's motor)	Passenger's motor	Window regulator	Key-off timer circuit (In the integrated control unit)	Poor ground	Open circuit, loose or disconnected terminals
	Blown No. 5 (10 A) fuse	Blown No. 34 (15 A) fuse	Blown No. 47 (20 A) fuse	Blown No. 50 (20 A) fuse													
Both windows do not operate.	1	2			3									4	G401 G402 G201	GRY/BLK	
Driver's window does not operate in any position.				1		4	2	3						5	G401 G402	WHT/YEL	
Driver's window does not operate in AUTO.						3	1			2						RED/GRN or BLU	
Passenger's window does not operate.			1				2	3				4	5		G401 G402	BLU/BLK, BLU/YEL, BLU/GRN, BLU/RED or BLU/WHT	
Both windows do not operate within the first ten minutes after the ignition switch has been turned OFF.	1	2				3								4	G401 G402	WHT/BLU, GRN/RED or GRN/BLU	