



# Troubleshooting

NOTE: The numbers in the table show the troubleshooting sequence.

Item to be inspected		In the engine compartment fuse/relay box		In the under-hood fuse/relay box	Faulty indicator light (LED)	Horn circuit	Starting system	A/T: A/T gear position switch M/T: Clutch interlock switch	Lighting system	Door key switch	Ignition key switch	Trunk key switch	Trunk latch switch	Hood switch	Engine compartment lid switch	Door switch	Control unit input	Poor ground	
		Blown No. 18 (20A) fuse	Blown No. 5 (10A) fuse																
Symptom		1	2	3	4						5								
Security alarm can't be set (indicator light does not flash).		1	2	3	4						5							G401 G402 or G404	YEL/BLU, YEL, WHT/GRN, GRN or BLU/GRN
Starting system does not work.							1	2									3	G401 G402 or G404	BLK/WHT, BLK/GRN or BLK/YEL
Security alarm can be set, but alarm does not work when the trunk, hood or either door is unlocked without the key.	Horn alarm			1	2												3		WHT/GRN, ORN/BLK, YEL/GRN <sup>1</sup> or LT GRN/WHT
	Headlight alarm								1								2		LT GRN/RED, BLU/RED <sup>1</sup> or RED/YEL
	Both alarms																1		
Alarm not canceled when the door is unlocked with the key.										1							2	G401 G402 or G404	GRN/YEL <sup>1</sup> , GRN/YEL <sup>2</sup> , BLU/RED <sup>2</sup> or BLU/RED <sup>3</sup>
Alarm not canceled when the key is inserted in the ignition switch.			1								2						3		YEL
Alarm not canceled when the trunk lid is opened with the key.												1	2				3	G551	BRN/WHT or WHT
Alarm does not work when the hood is opened.														1			2	G301	YEL/GRN <sup>2</sup>
Alarm does not work when the engine compartment lid is opened.															1		2	G401 G402	BLU
Alarm does not work when the doors are opened.																1	2	G401 G402	GRN/BLU or GRN/RED