

Safety Indicator

Troubleshooting

NOTE: The numbers in the table show the troubleshooting sequence.

Item to be inspected	Blown No. 5 (10 A) fuse (in the under-dash fuse box)	Blown No. 34 (15 A) fuse (in the under-dash fuse box)	Safety indicator input	Safety indicator (diodes)	Blown bulb	Brake light failure sensor	Door switch	Trunk latch switch	Retractable headlight control unit (see page 23-170)	Poor ground	Open circuit in wires, loose or disconnected terminals
Symptom											
No indicator operates.	1		2							G401 G402	YEL
Indicator panel illumination doesn't light with lighting switch ON.					1						RED/BLK or RED
Indicator lights fail to come on when ignition switch is turned to ON.			1								
Door warning lights don't light with doors opened.			2				1				GRN/BLU or GRN/RED
Trunk warning light doesn't light with trunk lid opened.		1	3					2			GRN/BLK
Brake Indicator light doesn't light with blown brake light bulb.			1								ORN/WHT or GRN
Brake Indicator light remains on with good brake light bulbs.			2			1				G501	
Ceiling light is not on with door opened (When switch position is in MIDDLE).				1							BLK/WHT
Retractor motor Indicator light remains on with good retractor motor.			1						2		
Retractor motor Indicator light is not on with faulty retractor motor (Stuck by foreign matter)			1						2		RED/YEL