


Combination Light/Turn Signal Switch Test

1. Remove the dashboard lower cover (see page 23-182).
2. Disconnect the 18-P connector from the floor wire harness.
3. Check for continuity between the terminals, in each switch position, according to the table.

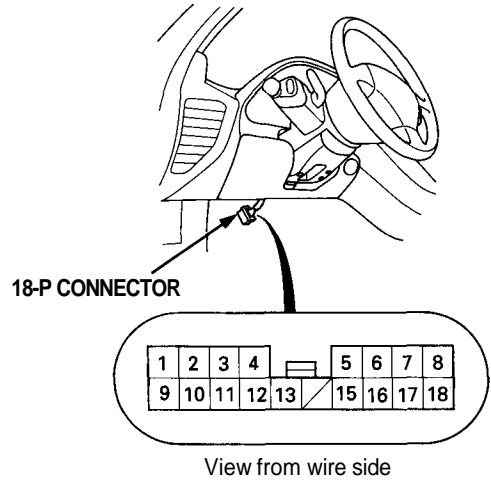

Headlight/Dimmer/Passing Switch

Terminal		2		3	4	5	7	8		12	13		15	16	18	
Position																
All position																
Headlight switch	OFF															
	•															
	•															
Dimmer switch (Headlight switch "•")	LOW															
	HIGH															
Passing switch	ON															

Turn Signal Switch

Terminal		6		10	11
Position					
RIGHT					
NEUTRAL					
LEFT					