


SET/RESUME Switch Test

CAUTION: Before disconnecting any part of an SRS wire harness, connect the short connectors (see [section 24](#)).

1. Disconnect the cable reel harness and main harness 6-P connector. Connect test harness C only to the cable reel harness side of the 6-P connector.

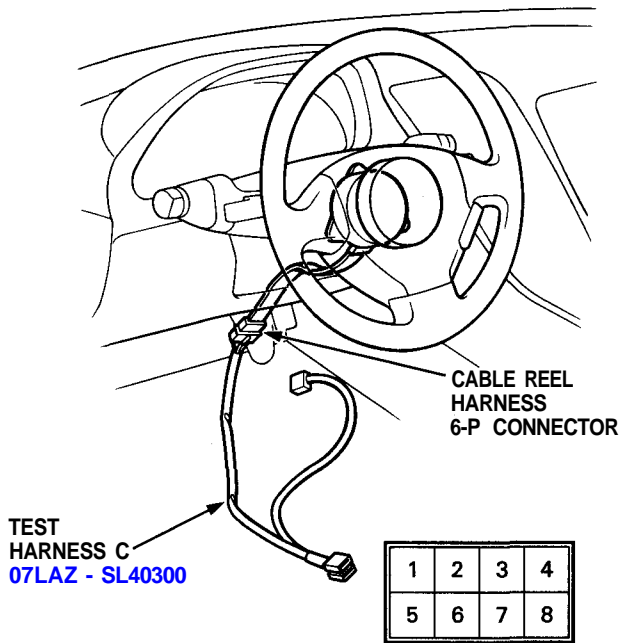


2. Check for continuity between the terminals in each switch position according to the table.

Terminal	3	2	1
Position			
SET (Pushed)	○—○		
RESUME (Pushed)	○		○

- If there is no continuity, check the cable reel.
- If OK, go to step 3.

3. Remove the switch cover from the SET/RESUME switch, then remove the SET/RESUME switch by removing the two screws.

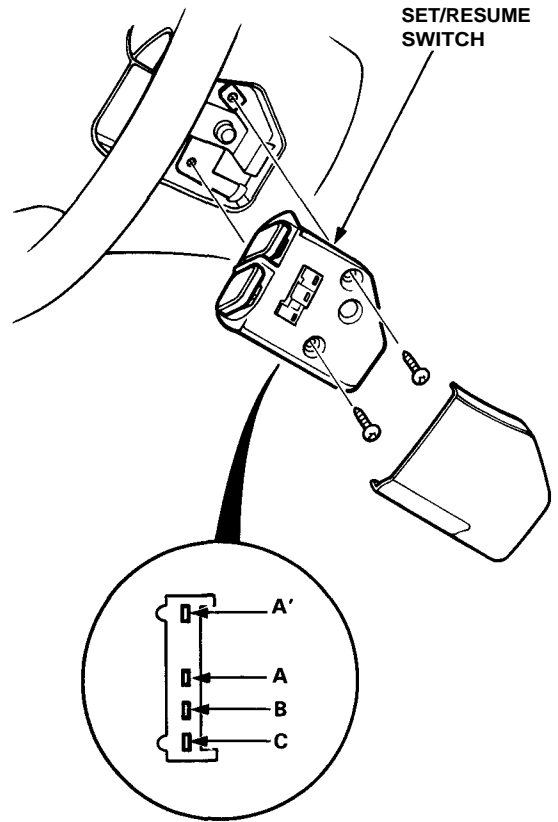

4. Check for continuity between the terminals in each switch position according to the tables.

Terminal	A or A'	B	C
Position			
SET (Pushed)	○—○		
RESUME (Pushed)	○		○

If there is no continuity, replace the switch.