






- Remove the four screws and remove the combination light switch (main switch).

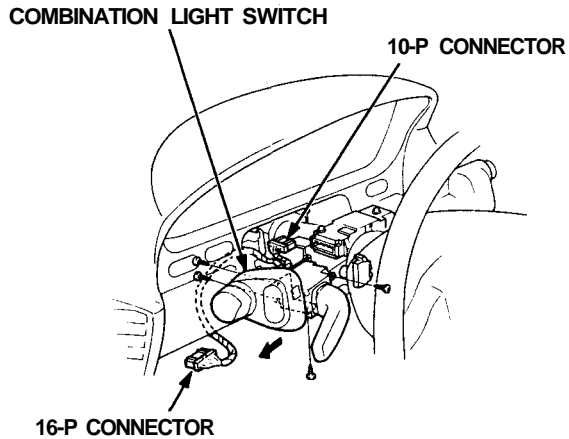

## Main Switch Test

- Remove the dashboard lower panel and knee bolster pad.
- If necessary, remove the knee bolster.
- Disconnect the 16-P connector and check for continuity between the terminals in each switch position according to the table.

Terminal Position	5	15		1	7		16
OFF		○	⊕	○	○	⊕	○
ON	○	○	⊕	○	○	⊕	○

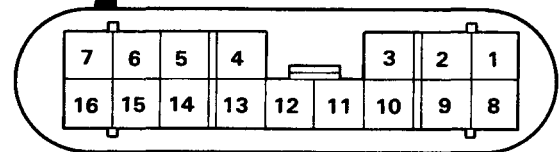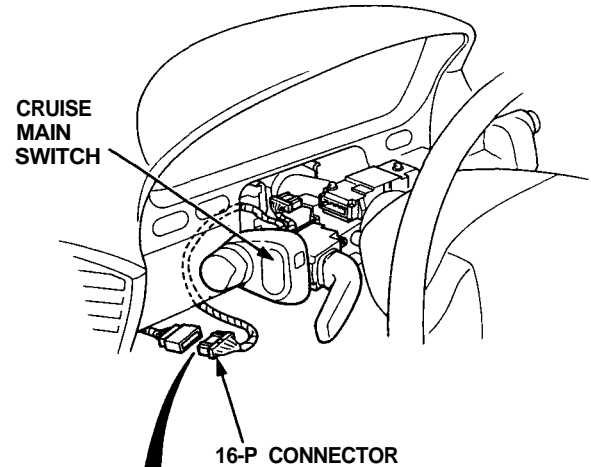

View from terminal side

