


Knuckle/Control Arms/Compliance Pivot

Ball Joint Boot Replacement

NOTE: The upper control arm ball joint, lower control arm ball joint and knuckle upper ball joint are attached with the boot retainer to improve the sealing efficiency of the boot.


1. Remove the set ring and boot.
2. Remove the retainer.

NOTE: The knuckle lower ball joint does not have a retainer.

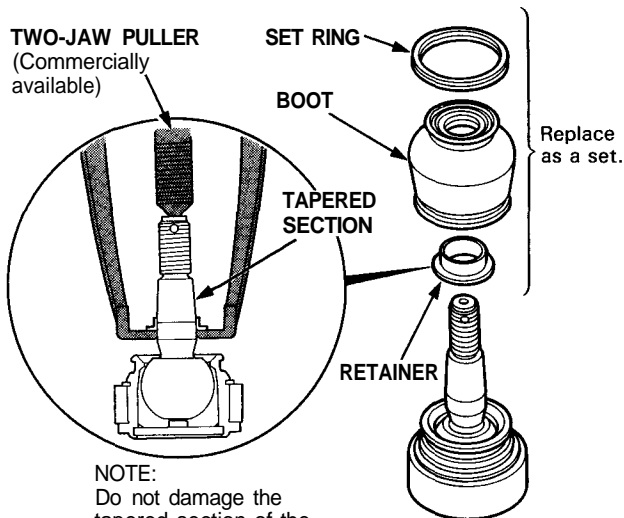

NOTE:
Do not damage the tapered section of the ball pin with the bearing puller.


3. Pack the interior of the boot and lip with grease.

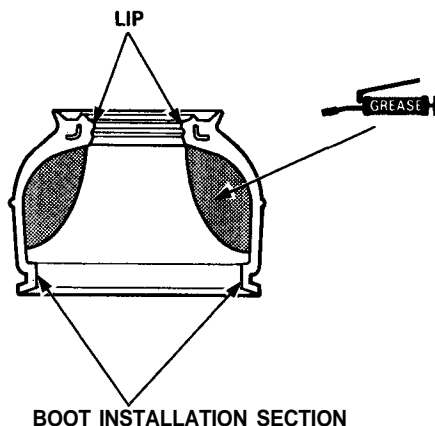

CAUTION: Do not contaminate the boot installation section with grease.

4. Wipe the grease off the sliding surface of the ball pin, and pack with fresh grease.
5. Insert the new retainer lightly into the ball joint pin.

NOTE: When installing the ball joint, press the retainer into the ball joint pin.

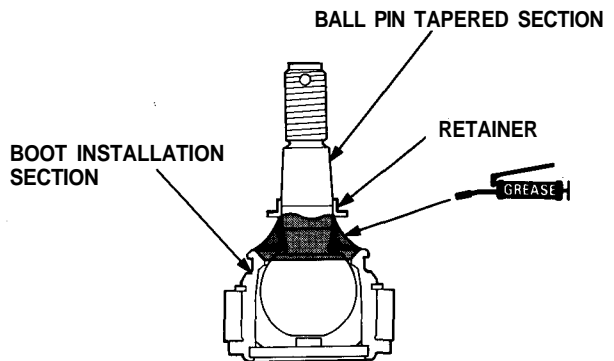

CAUTION:


- Keep grease off the boot installation section and the tapered section of the ball pin.
- Do not allow dust, dirt, or other foreign materials to enter the boot.

6. Install the boot in the groove of the boot installation section securely, then bleed air.
7. Adjust the special tool with the adjusting bolt until the end of the tool aligns with the groove on the boot.
8. Slide the set ring over the tool and into position.

BALL JOINT. BOOT CLIP GUIDE
07GAG - SD40700

ADJUSTING BOLT
Adjust the depth by turning the bolt.

BALL JOINT BOOT CLIP GUIDE
07MAG - SL00200
Adjust the depth by turning the tool.

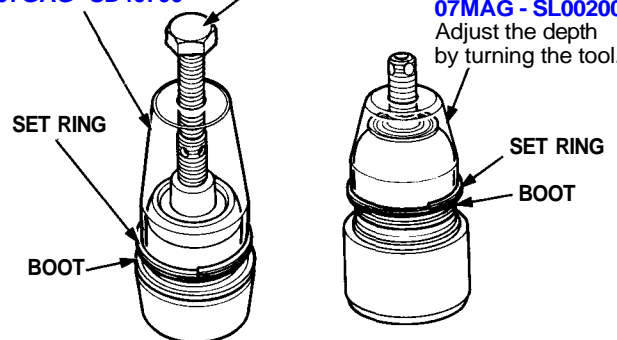

• upper knuckle and upper/lower control arm.

• knuckle lower ball joint only.

CAUTION: After installing the boot, check the ball pin tapered section and threads for grease contamination and wipe them if necessary.